


LEAF WETNESS SENSOR

SPECIFICATIONS

Power Requirements: 12VDC @ 1.0mA
Output: 0-5 VDC
Size: 2.5" x 3.5"
Shipping Weight: 2 lbs

INSTRUMENT CONNECTIONS

Black = Ground
Red = +12VDC
Brown = Signal Out 0-5VDC

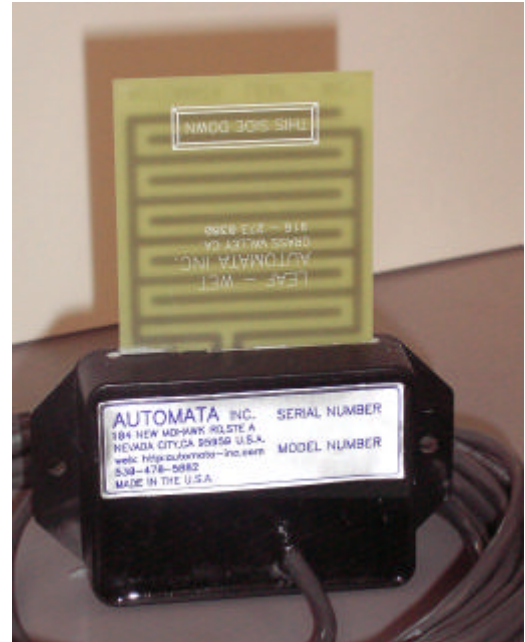

INSTALLATION

Hang the sensor from the cable at the location where leaf wetness needs to be monitored. The sensor can hang right in the plant. Set the angle of the sensor to approximately the same angle as that of the leaves that are being monitored. To minimize the influence of rain, hang the sensor with sensitive side downward.

7/02